


顶尖尾座

NC转台对应表

尾座型号 NC旋转工作台 型号	手动	油压	空压
			
RN-100	TL-110M	—	—
RWE/RWA/RWH-160 RWM-160	TL-135M	TLH-135	TLP-135M
RBS/RBH-160 RBM-160 RWE/RWA/RWH-200 RWA/RWH-250 RWB-250 RWM-200/250	TL-160M	TLH-160	TLP-160M
RBS/RBH-250 RWA/RWH-320 RWB-320 RWM-320	TL-210M	TLH-210	—
RBS/RBH-320 RWB-400	TL-255M	TLH-255	—
RWB-500	TL-310M	—	—
RWB-630 RNCK-631	TL-400M	—	—
RCV-800	TL-530M	—	—


型号

T L - 1 6 0 M

中心轴高度

记号	型号
无	手动
H	油压
P	空压

使用空压尾座实例



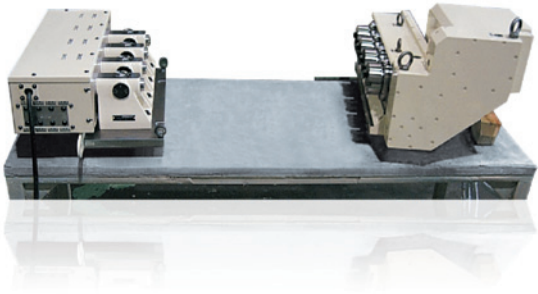


手动顶尖尾座

TL-110M,135M






TL-135M

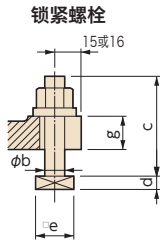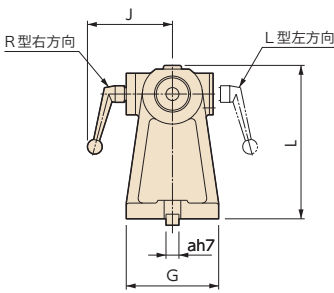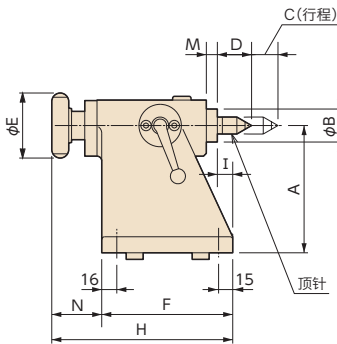

TL- M



TL-160M

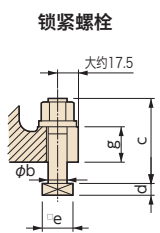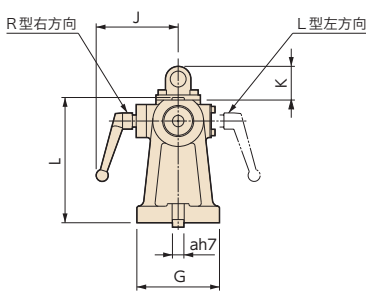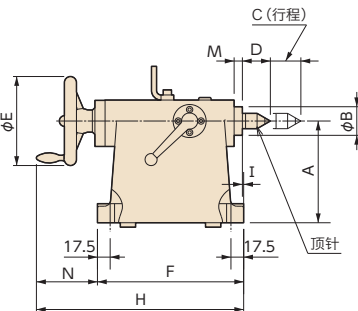

尺寸

单位: mm

型号	锥度	中心高度 A	中心径 B	行程 C	顶针 D	手轮径 E	底面尺寸 F×G	H	I	J	K	L	M	N	a	b	c	d	e	g	重量 kg
TL-110M	MT2	110	35	28	36	70	139×100	192	16	92	—	141	12	53	14	12	55	8	23	20	8
TL-135M	MT2	135	35	28	36	70	139×100	192	16	92	—	166	12	53	14	12	55	8	23	20	9
TL-160M	MT3	160	45	47	44	140	230×130	328	2	129	53	197	13	98	18	16	75	11	28	30	22
TL-190M	MT3	190	45	47	44	140	230×140	328	2	129	53	227	13	98	18	16	75	11	28	30	24
TL-210M	MT3	210	45	47	44	140	230×146	328	2	129	53	247	13	98	18	16	75	11	28	30	26
TL-235M	MT4	235	50	51	52.5	160	270×160	381	12	132	53	274	8	113	18	16	80	11	28	35	30
TL-255M	MT4	255	50	51	52.5	160	270×170	381	12	132	53	294	8	113	18	16	80	11	28	35	38
TL-310M	MT4	310	60	51	52.5	180	315×220	422	15.5	154	68	354	9.5	107	18	16	85	11	28	40	63
TL-400M	MT4	400	60	51	52.5	180	315×240	422	15.5	154	68	444	9.5	107	18	16	85	11	28	40	76
TL-530M	MT4	530	80	66	52.5	225	410×290	528	29	165	68	594	6	118	22	20	95	13	32	40	138



TLP-135M

使用实例




油压顶尖尾座


TLH-□□□



TLH-160

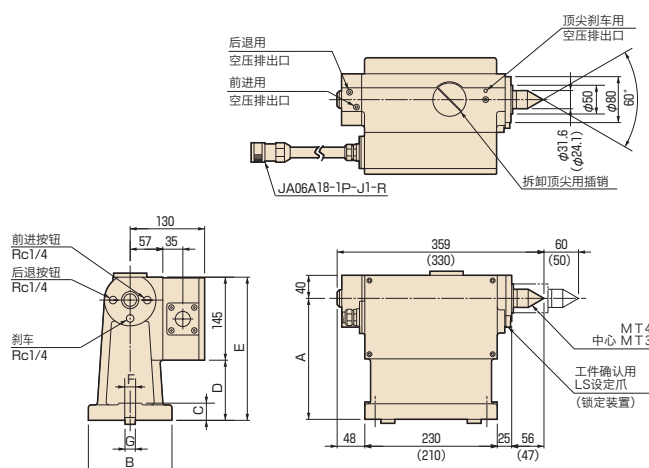

锁紧螺栓

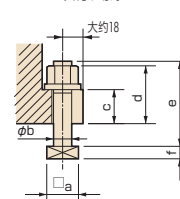

注 1. () 内的尺寸为TLH-135

2. 订货时, 请指定电缆的长度。

尺寸及规格

单位: mm

型号	A	B	C	D	E	F	超硬顶针	油压 MPa	顶针推力 N	顶针锁紧力 N	重量 kg
TLH-135	135	110	25	30	175	19	MT3	1.5~6.8	1,670	2,450	28
TLH-160	160	130	30	55	200	19	MT4		2,352		33
TLH-210	210	146	30	105	250	19	MT4		2,352		36
TLH-255	255	170	35	150	295	19	MT4		2,352		40

* 顶针推力和顶针锁紧力所表示的为油压3.5MPa时的力。

锁紧螺栓尺寸

单位: mm

型号	G	a	b	d	e	f
TLH-135	14	23	12	42	60	8
	16	26	16	46	70	10
	18	28	16	46	70	11
TLH-160 TLH-210	14	23	12	47	65	8
	16	26	16	51	75	10
	18	28	16	51	75	11
TLH-255	16	26	16	56	75	10
	18	28	16	56	80	11
	20	32	18	60	90	11

RBS

RBH

多轴
RBM

TBS

RWE/RWA
RN

RWH

RWA-B
RNCV-B

RWB

RWB-K
RNCK

RCB

RCH
RNC

RCV

多轴
RWM

TWA/TN

TWB
TTNC多轴
TWM

RDS

RTV
RTTTDS
TDB单轴NC
控制器

附件

选项

资料